

# Installation instructions Gator

## Content

1 General instructions _____	2
2 System overview _____	2
 3 Installation input unit Gator RO _____	3
 4 Installation input unit Gator FL _____	6
 5 Installation input unit Gator FS _____	7
 6 Installation input unit Gator F/DF/R/DR _____	8
 7 Installation lock Gator 2000/3000/3010/5000/6000/8000/9000 _____	12
8 Bus address _____	15
9 External power supply _____	16
10 Wiring _____	16
11 Functional test _____	19

### 1 General instructions



- Please read the installation instructions carefully, before activating the lock.

#### 1.1 Liability notes

- The mounting of the electronic lock and the input unit has to be carried out according to the installation instruction.
- We point out that this installation instruction is part of the VdS-certification and non-compliance leads to the loss of this certification.
- By opening the lock cover warranty of the manufacturer will be void.
- Take care that the input unit or the lock and the cables should not be damaged.

### 2 System overview

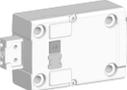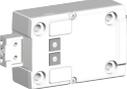

	GATOR F	GATOR DF	GATOR R	GATOR DR	GATOR RO	GATOR FL	GATOR FS
 <b>GATOR 2000</b>			•	•	•		
 <b>GATOR 3000 3010</b>	•	•			•*	•	•
 <b>GATOR 5000</b>	•	•				•**	•**
 <b>GATOR 6000 8000 9000</b>	•	•					


\* can serve simultaneously as boltwork actuator  
 \*\* without redundancy

### 3 Installation input unit Gator RO

#### 3.1 Input unit Gator RO




#### 3.1.1 Dimensions Gator RO

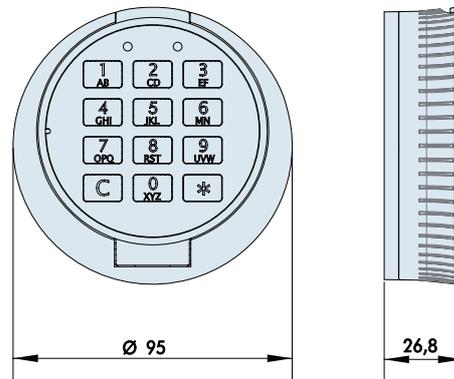

### 3.2 Installation overview

#### 3.2.1 Input unit Gator RO

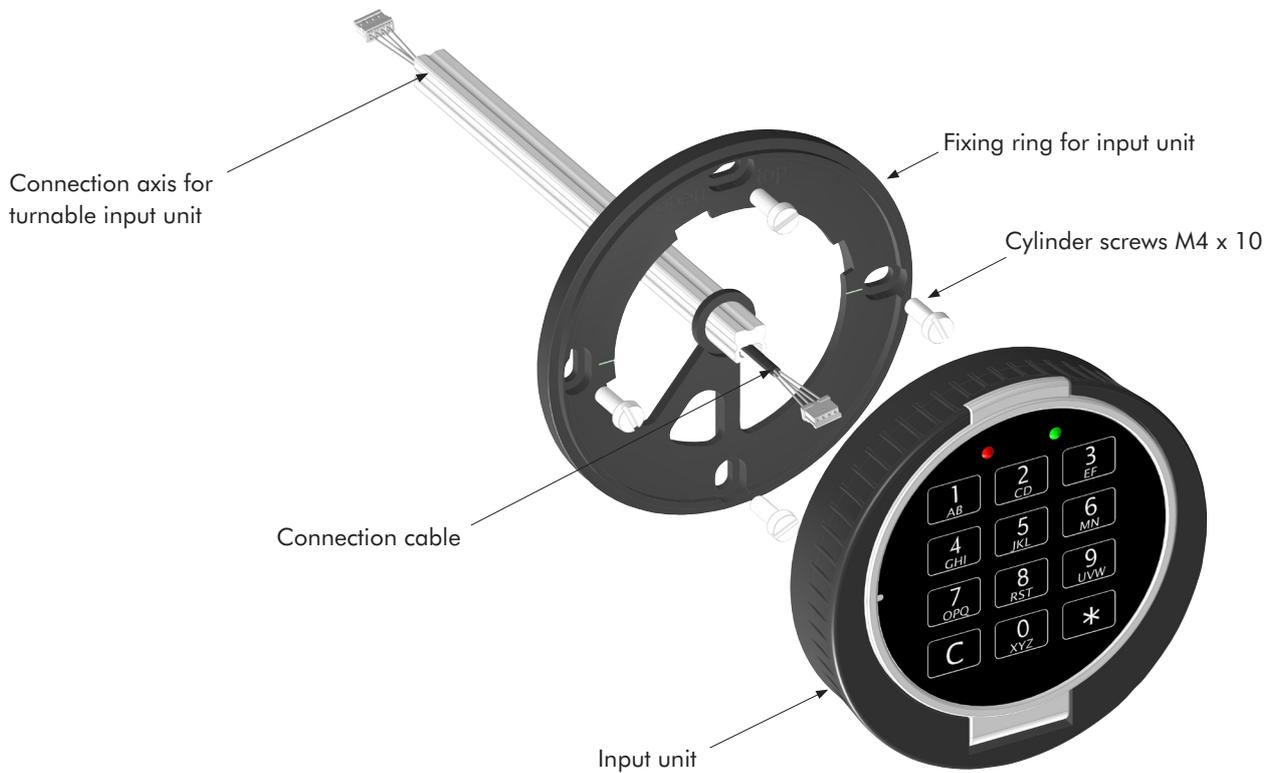


### 3.3 Panel hole Gator RO (turnable)

#### 3.3.1 Spindle square




#### 3.3.2 Spindle round

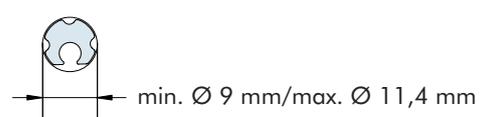


**3.4 Axis length calculation input unit Gator RO (turnable)**

**3.4.1 In connection with Gator 2000**

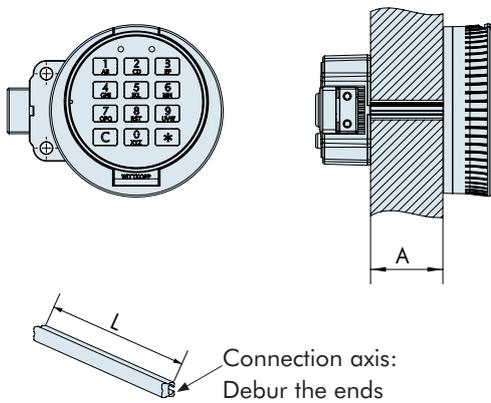

$L = A + 43 \text{ mm (tolerance -4 mm)}$


**3.4.2 In connection with boltwork**

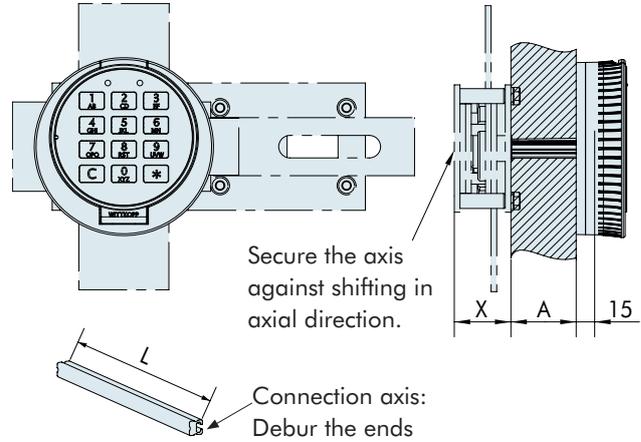

$L = X + A + 15 \text{ mm (+ axial hedge)}$


**3.5 Mounting**

**3.5.1 Drill pattern fixing ring Gator RO**

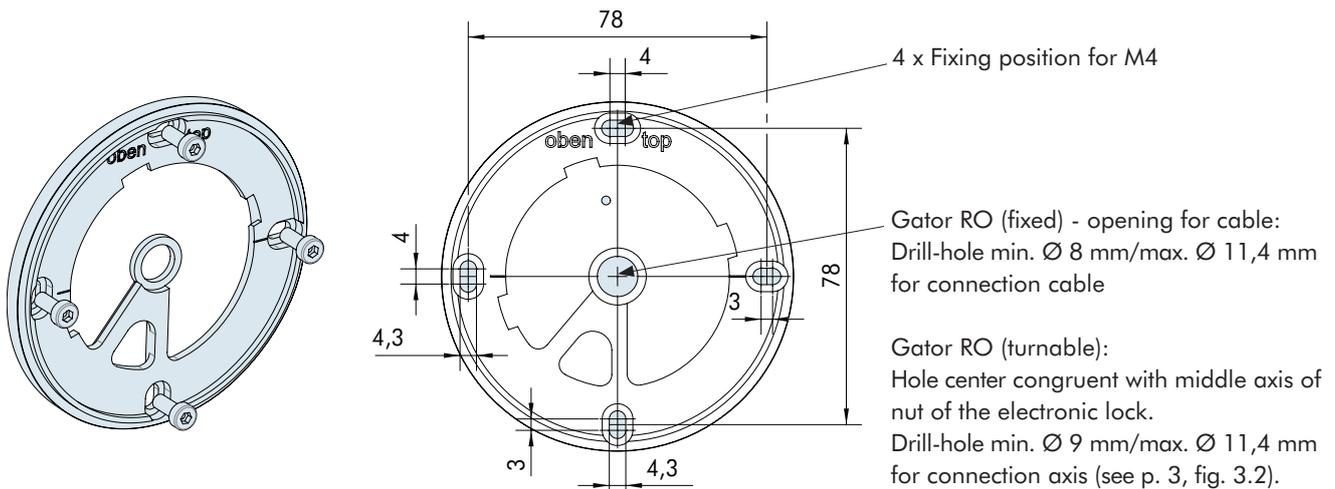


- From the front 4 threaded holes M4 with sufficient depth thread and 1 through-hole (opening for cable/connection axis) have to be drilled into the safe door.
- From the front the fixing ring has to be fixed with the enclosed cylinder screws M4 x 10.

**3.5.2 Mounting input unit Gator RO**

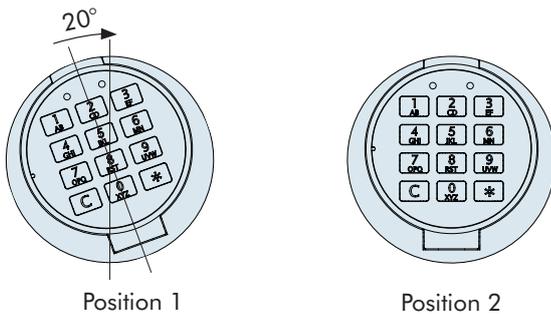


- Position 1: Mount the input unit with an angle of approx. 20° to the fixing ring.
- Position 2: Turn the input unit to the right into position. The turning has to happen easily.

### 3.5.3 Input unit Gator RO (fixed)

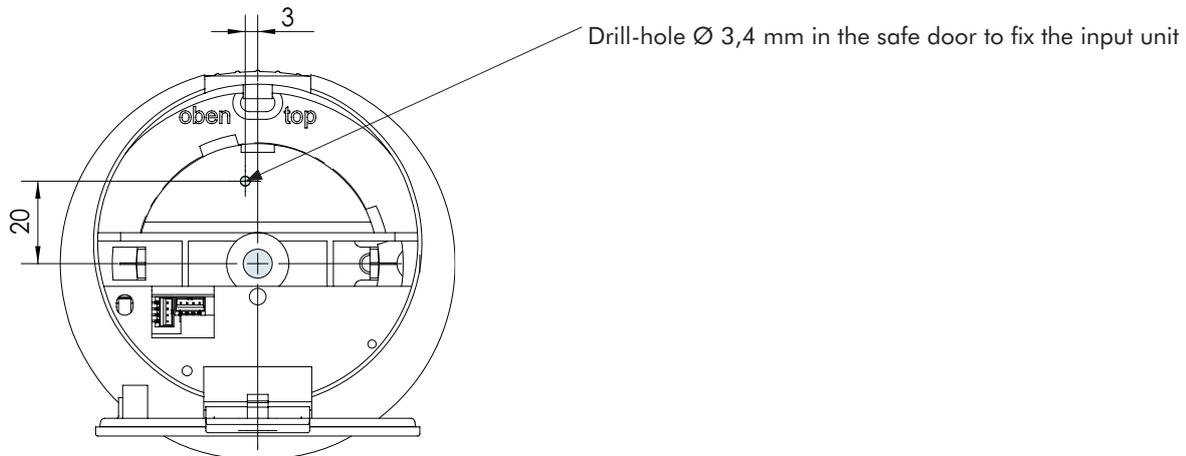


- Fit input unit of approx. 20° (see 3.5.2), adjusting to the locked lock/boltwork and insert grub screw M3 x 6 or arrest pin.

### 3.5.4 Cable guidance Gator RO (turnable)

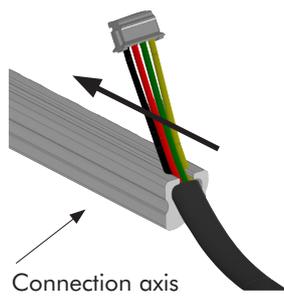

### 3.5.5 Plug position Gator RO

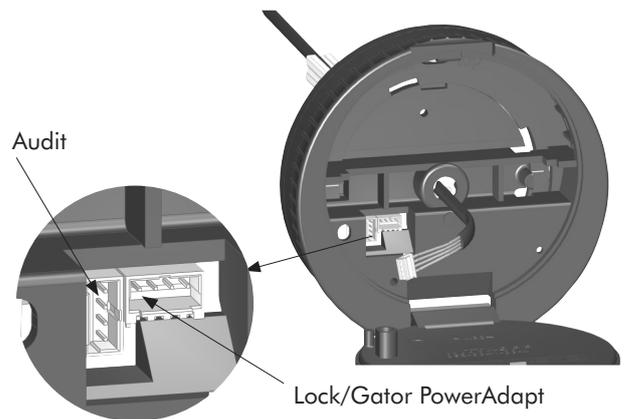

- Gator RO (turnable): Lead connection cable through the input unit.
- Gator RO (turnable): Insert the connection axis into the input unit from behind.
- Gator RO (turnable/fixed): Lead connection cable through the input unit and connect the plug.

### 4 Installation input unit Gator FL


#### 4.1 Input unit Gator FL (fixing on the inside)



#### 4.1.2 Input unit Gator FL (fixing on the front)



#### 4.1.3 Dimensions Gator FL

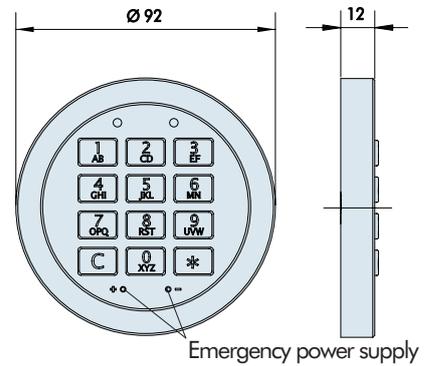


### 4.2 Mounting

#### 4.2.1 Drill pattern Gator FL

Opening for cable:

Drill-hole min. Ø 8 mm/max. Ø 11,4 mm in the safe door for connection cable

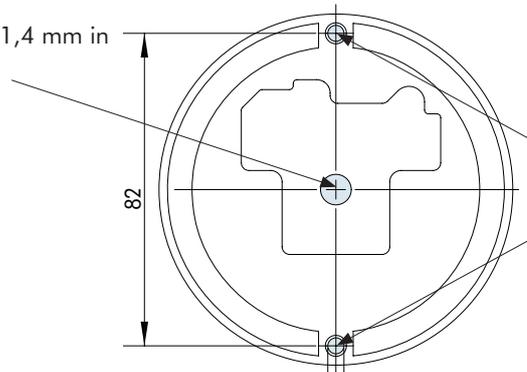


Fixing position:

- Fixing on the inside: Through-hole for screws M5
- Fixing on the front: Thread M3


- Fixing on the inside: 2 through-holes for screws M5 and 1 through-hole (opening for cable) have to be drilled into the safe door. Fix the input unit with 2 screws M5 from behind.
- Fixing on the front: From the front 2 threaded holes M3 with sufficient depth and 1 through-hole (opening for cable) have to be drilled into the safe door. Fix the input unit with 2 screws M5 from the front.

#### 4.2.2 Battery compartment

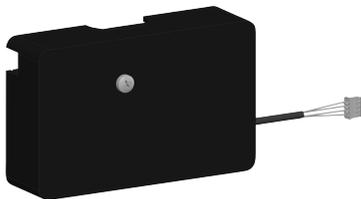

- The battery compartment has to be fixed to the inside of the door. It is recommended to fix it in a way that it is accessible without unscrewing the interior of the door.
- Drill pattern see chapter 9.1.2
- To avoid a short circuit/independent discharge, no connection between the inputs of the battery compartment and other components may occur.

#### 4.2.3 Plug position Gator FL

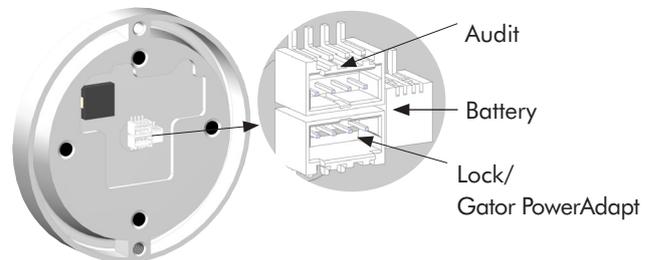


- The two 4-pin plug connection must be accessible at all times.
- Attention: For the comfortable reading out the audit, the connection cable audit has to be connect at the input unit durable and has to be lead well accessible.

## 5 Installation input unit Gator FS

### 5.1 Input unit Gator FS




### 5.1.1 Dimensions Gator FS

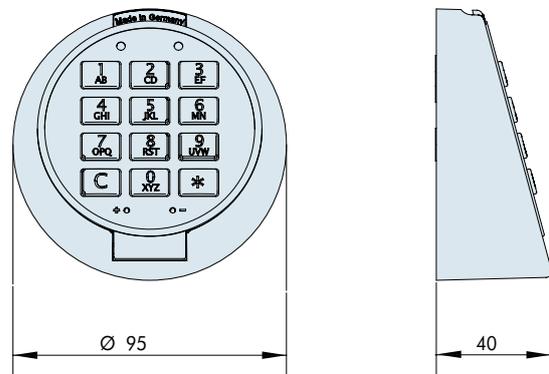

## 5.2 Mounting

### 5.2.1 Drill pattern Gator FS


Fixing position for screws M5

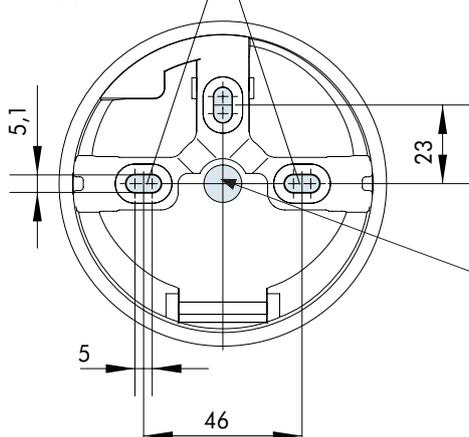

Opening for cable:  
Drill-hole min.  $\varnothing$  8 mm/max.  $\varnothing$  11,4 mm for connection cable has to be drilled into the safe door


- From the front 2 threaded holes M5 with sufficient depth and 1 through-hole (opening for cable) have to be drilled into the safe door.
- Fix the input unit with the enclosed cylinder screws M5 from the front.

### 5.2.2 Cable routing Gator FS

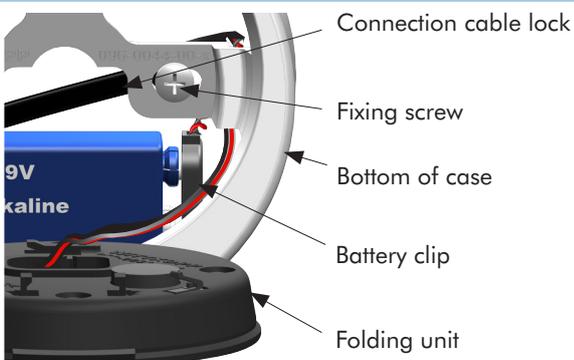

- Lead connection cable lock and connection cable battery behind the bottom of casse of the input unit..

### 5.2.3 Plug position Gator FS

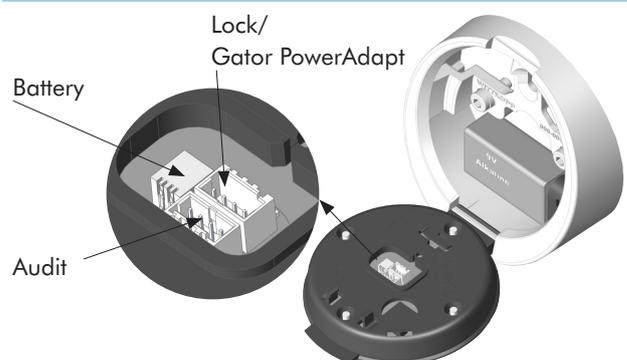

### 6 Installation input unit Gator F/DF/R/DR

#### 6.1 Input unit Gator F/DF




iButton-reader  
(optional)

#### 6.1.1 Input unit Gator R/DR




iButton-reader  
(optional)

#### 6.1.2 Dimensions Gator F/DF

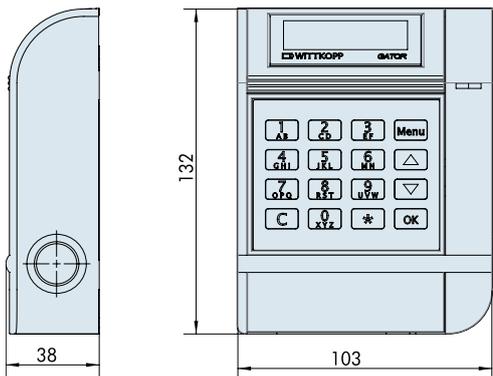


#### 6.1.3 Dimensions Gator R/DR

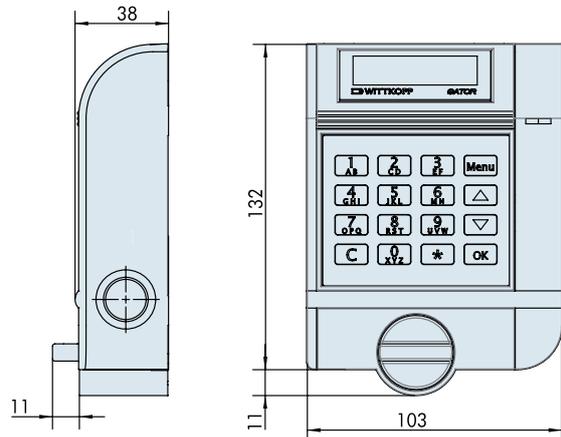

### 6.2 Axis length calculation input unit Gator R/DR


#### 6.2.1 In Verbindung mit Gator 2000

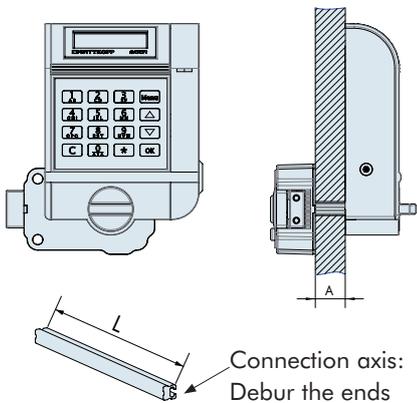

$$L = A + 48 \text{ mm (tolerance } -1,5 \text{ mm)}$$

## 6.3 Mounting

### 6.3.1 Drill pattern Gator F/DF/R/DR

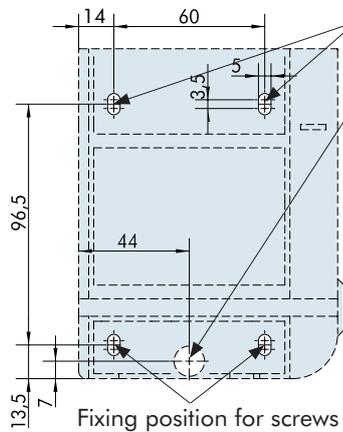

Fixing position for screws M4

Gator F/DF: Opening for cable:

Drill-hole min.  $\varnothing$  8 mm/max.  $\varnothing$  11,4 mm for connection cable


Gator R/DR: Hole center congruent with middle axis of nut of the electronic lock.

Drill-hole min.  $\varnothing$  9 mm/max.  $\varnothing$  11,4 mm for connection axis

(see p. 3, Fig. 3.2).


- From the front 4 threaded holes M4 with sufficient depth and 1 through-hole (opening for cable/connection axis) have to be drilled into the safe door.
- Fix the input unit with the enclosed 4 screws M4 x 12 from the front.

### 6.3.2 Cable routing Gator F/DF

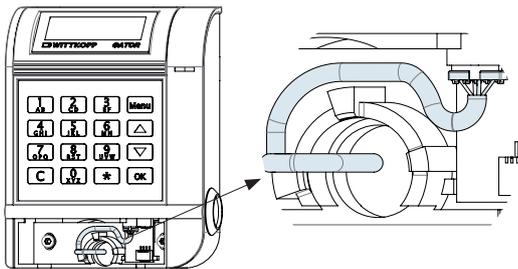


- Lead connection cable through the connection axis and input unit.

### 6.3.3 Cable routing Gator R/DR

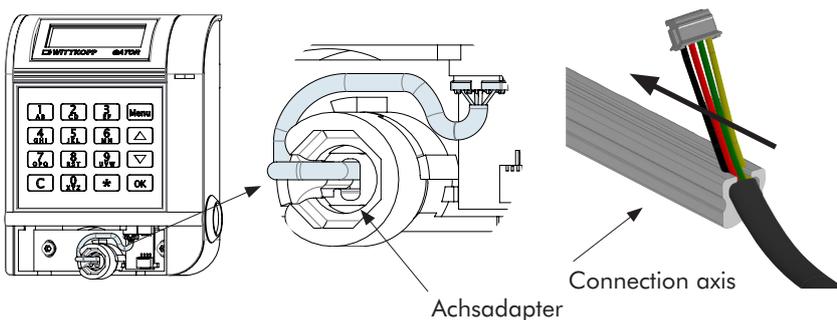


- Lead connection cable through the spindle adaptor.
- Lead connection cable through the connection axis.
- Insert the connection axis into the input unit from behind.
- Connect the plug into the input unit.

### 6.3.4 Plug position Gator F/DF/R/DR

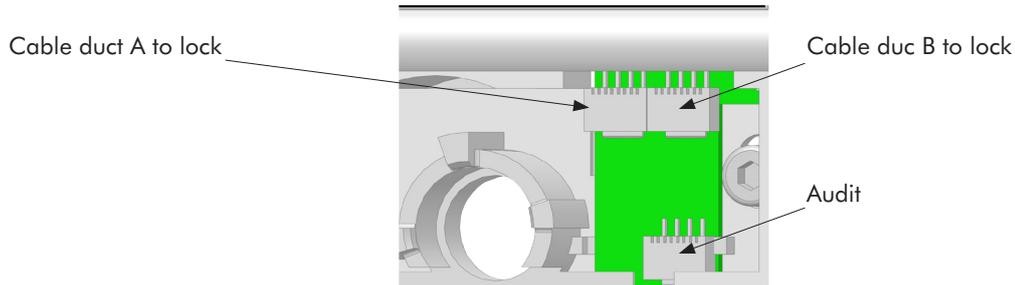


- Cable duct A: Standard connection to the lock.
- Cable duct B: Additional connection to the lock for generating a redundancy - activate configuration in Software GatorSelect and transmit via ibutton.
- Specific setting between the bus channels: The bus channel A and bus channel B of the input units can change in the following way.
  - \*\* ◀◀ \*\* (◀ = Arrow left) select bus channel A
  - \*\* ▶▶ \*\* (▶ = Arrow right) select bus channel B

### 6.3.5 Battery compartment/cover cap

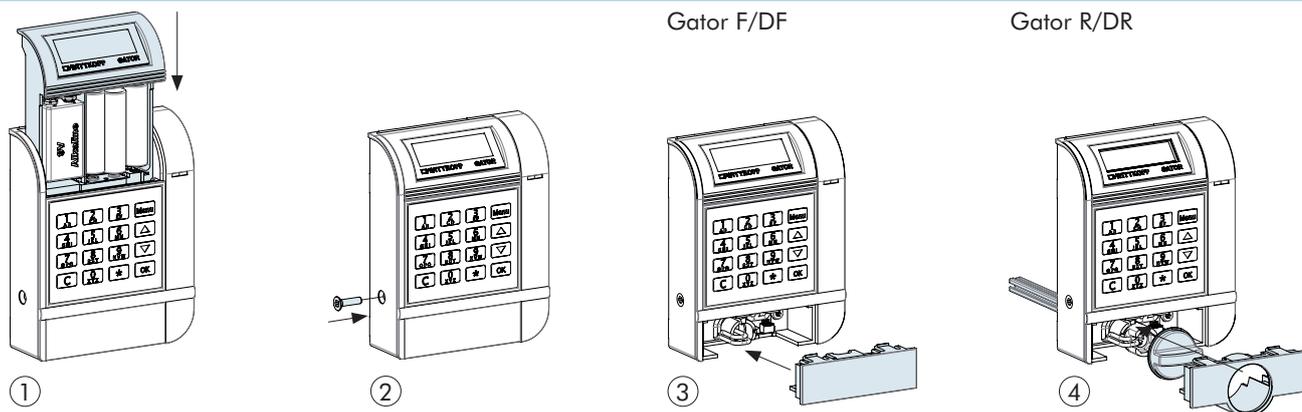

- Fig. 1: Slide the battery compartment into the input unit from above.
- Fig. 2: Fix the safety screw M4 x 16 from the side – optional.
- Fig. 3: Gator F/DF: Insert cover cap at the bottom of the input unit.
- Fig. 4: Gator R/DR: Insert turning knob and cover cap at the bottom of the input unit.

## 6.4 Power supply display

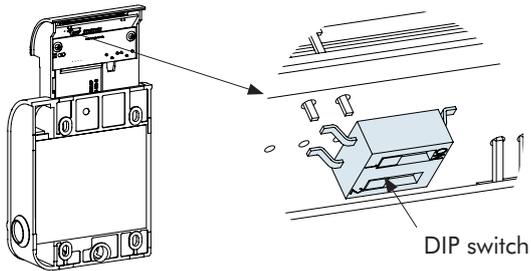


### 6.4.1 Power supply via batteries



- Slide DIP switch at the back of the battery compartment into illustrated position.
- Insert 3 x 1,5 AA Alkaline batteries.

### 6.4.2 Power supply via adapter

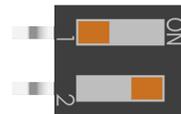

Factory mode

- Slide DIP switch at the back of the battery compartment into illustrated position.

Attention:  
By energization via adapter it is recommended to remove the batteries.


### 7 Installation lock Gator 2000/3000/3010/5000/6000/8000/9000

Before mounting the lock the input unit has to be installed (see chapter 3 to 6).


Wittkopp electronic locks of the Gator series have got standard fixing points and can be mounted in all 4 directions (right-hand, left-hand, up, down)

- The lock can be installed in all conventional safes.
- Depending on the model there can be optional used more locking elements (e.g. angle with bolts) additional to the existing holes of the bolt. Please make sure that the lock and the connections operate properly.
- The electronic lock is maintenance free in normal domestic and office surroundings. After approx. 10,000 closures it is recommended to carry out a security and functional test of the electronic lock.
- For safety reasons it is not allowed to locate the electronic lock in the area where openings are (except Gator 2000).
- The electronic lock has to be protected against external attacks.
- Do not insert any lubricants or other substances into the electronic lock.

#### 7.1 Dimensions lock Gator 2000

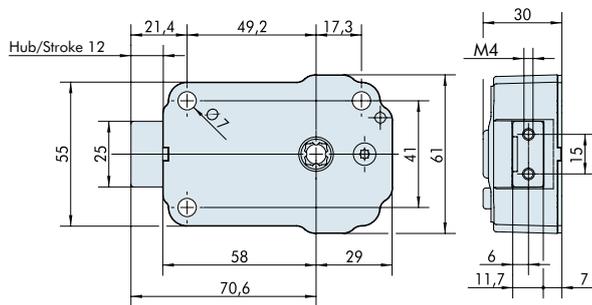


#### 7.2 Dimensions lock Gator 3000/3010

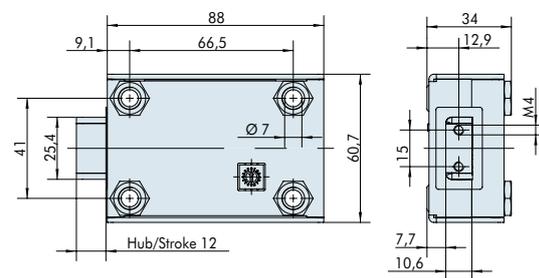


#### 7.3 Gator 3010 mechanical emergency lock

If a mechanical emergency lock with VdS class 1 is used, the whole emergency lock system receives VdS class 1. When using a class 2 emergency lock the certification remains the same.

#### 7.3.1 Dimensions lock Gator 3010 - short connection with mechanical emergency lock

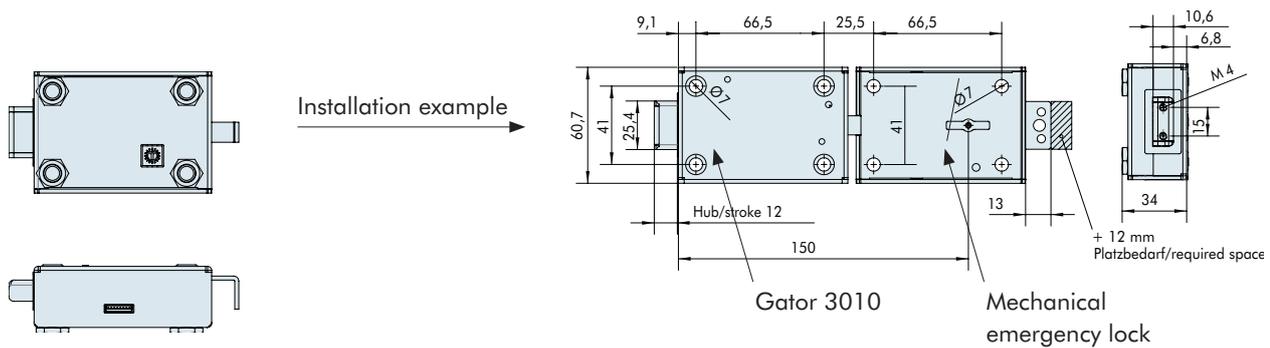


**7.3.2 Dimensions lock Gator 3010 - long connection with mechanical emergency lock**

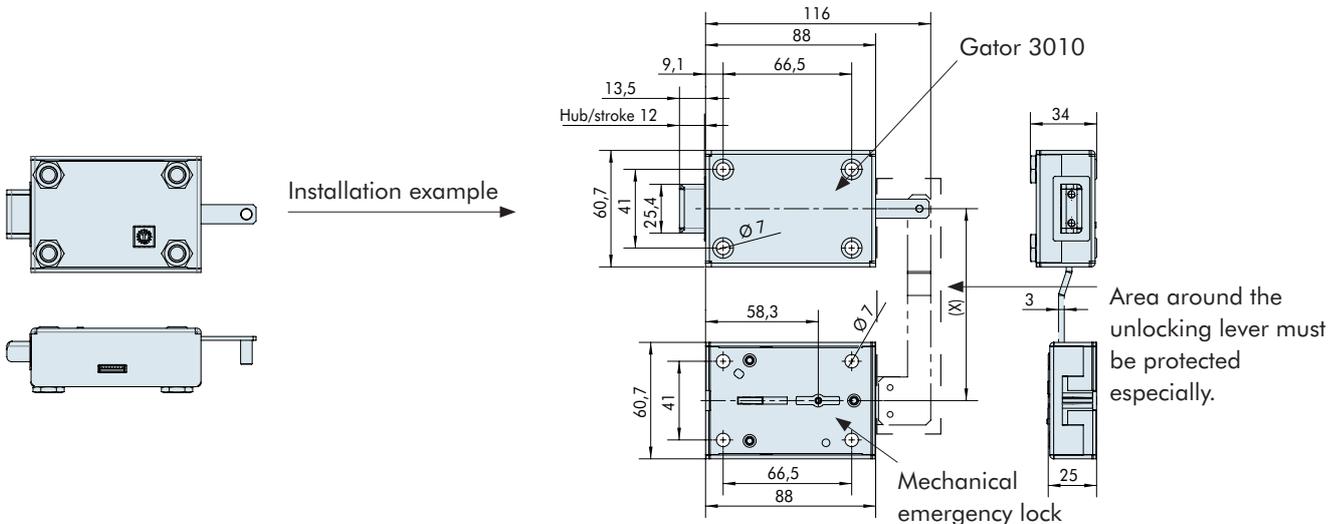


**7.4 Dimensions lock Gator 5000/6000/8000/9000**

**7.4.1 Bolt stroke**

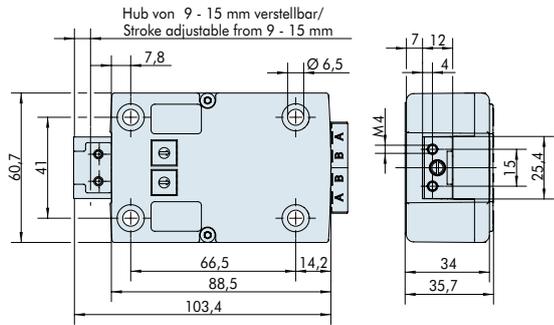


**Attention: Bolt stroke only has to be adjust when lock bolt is completely moved into locking position.**

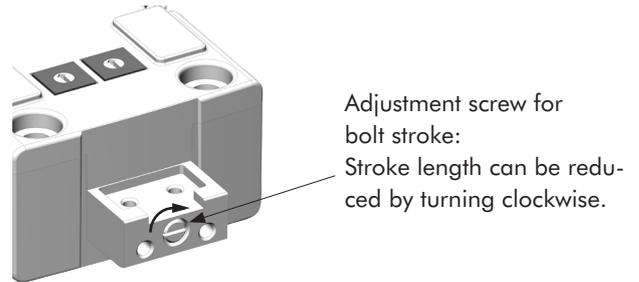

- Gator 5000/6000/8000/9000: Stroke length can be adjusted continuously from 9 – 15 mm (factory mode: 15 mm).


**7.5 Mounting**

**7.5.1 Drill pattern Gator 2000/3000/3010/5000/6000/8000/9000**

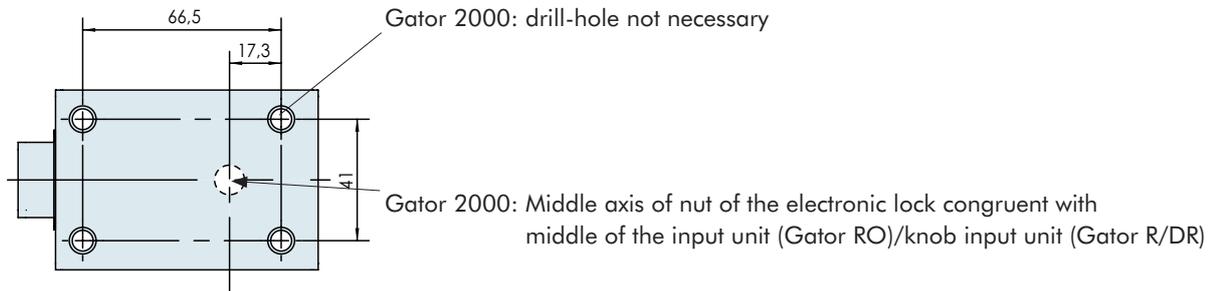

- For fixing the electronic lock 4 threaded holes M6 with depth min. 6 mm (or a comparable inch thread) have to be drilled into the safe door.
- Gator 2000: Lead connection cable through the lock and adjust the electronic lock on the connection axis.
- Fixing the lock with screws M6 or a comparable inch thread. Length and material application of the screw has to be selected such as a secure long-term stability is guaranteed.
- Turn the screws with a maximum turning force of 3.5 – 5 Nm.
- Independent loosening of the screws has to be avoided. Recommendation: put lock washers underneath the screw's head.
- After the installation the lock's bolt may not be loaded.
- Mind sufficient slackness of the locking point.

### 7.5.2 Bolt load Gator 2000/3000/3010/5000/6000/8000/9000

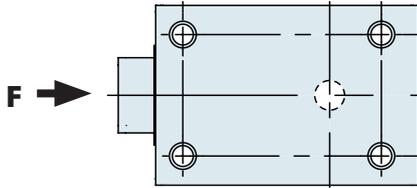


- The **maximum and constantly** bolt load against **bolt closing direction** may not exceed the following limits:


Gator 2000	2,5N
Gator 3000	2,5N
Gator 5000, 6000, 8000, 9000	30 N

## 7.6 Plug positions


### 7.6.1 Gator 2000

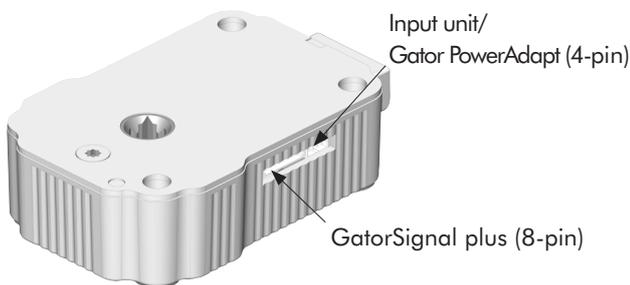


### 7.6.2 Gator 3000/3010

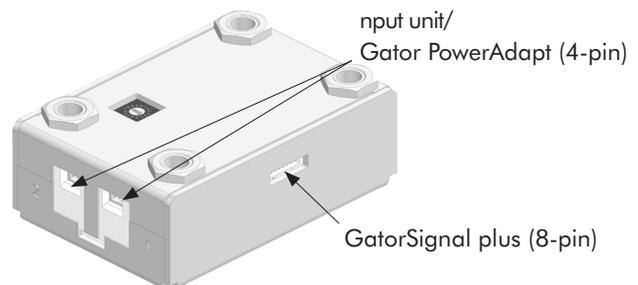

### 7.6.3 Gator 5000

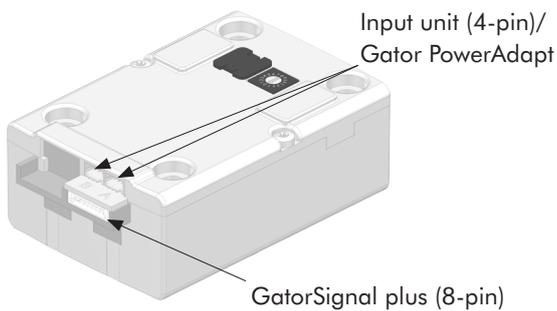

### 7.6.4 Gator 6000/8000/9000

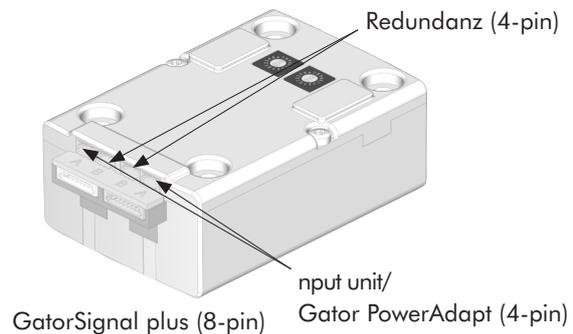


- Plug in the connection cable of the input unit in position „Input unit“ of the lock. To remove carefully pull out the plug.
- Keep away connection cable of sharp edges and movable parts of the boltwork and fix it securely.
- Plug in connection cable of the signalbox (optional) in position „GatorSignal plus“ of the lock. Further installation instructions see separate installation instruction GatorSignal plus.
- Gator 6000/8000/9000: Plug in a connection cable for the redundancy between the left and the right electronic (Plug position B - B).

## 8 Bus address

- Within one system a maximum of 16 input units and a maximum of 15 locks can be connected.
- The address for the lock and the input unit has to be unique in one system.
- Gator 3000/3010/5000/6000/8000/9000: The bus addresses can be adjusted by turning the coding switch.
- Gator 6000/8000/9000: For redundancy you have to adjust 2 bus addresses for 1 lock.

### 8.1 Coding switch Gator 3000/3010/5000/6000/8000/9000

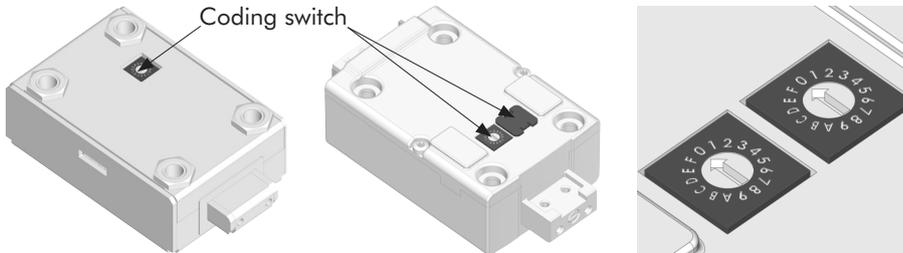

## 8.2 Adjusting bus addresses lock

### 8.2.1 Gator 2000

- Bus address fix setted on 09.

### 8.2.2 Gator 3000/3010/5000

Position Coding switch	0	1	2	...	9	A	B	C	D	E	F
Bus address lock	00	01	02	...	09	10	11	12	13	14	

### 8.2.3 Gator 6000/8000/9000

- Maximum 3 redundancy locks per system are available.
- Pairing of the address of the redundancy locks is mandatory according to table.
- The monitoring of the redundancy is only available with redundant laid bus cables and the input units Gator F/DF/R/DR.
- The monitoring of the redundancy is not active - activate configuration in Software GatorSelect and transmit via ibutton.

	Lock 1		Lock 2		Lock 3	
Position Coding switch	0	A	1	B	2	C
Bus address lock	00		01		02	

## 8.3 Adjusting bus addresses input units Gator RO/FL/FS/F/DF/R/DR

- The input unit must be in full working order.
- The bus addresses of the input unit Bus address are factory-adjusted on 00.
- The address for the the input unit has to be unique in one system.
- Use the following key combination at the input unit: \*\*\*Address input unit \*\*\*  
The address may have the value up 00, 01, 02 to 15 e. g. \*\*\* 02 \*\*\*


Bus address input unit	00	01	02	...	09	10	11	12	13	14	15
------------------------	----	----	----	-----	----	----	----	----	----	----	----

## 9 External power supply


- The Gator-System can externally power supplied by Gator PowerAdapt or GatorSignal plus.
- Refer to the corresponding note 6.4 Power supply display for the input units Gator DF/DR.
- When using mains adapter as primary power supply, there is no voltage control of the inserted battery.
- Emergency power supply (optional): insert 1 x 9V block Alkaline.

### 9.1 Gator PowerAdapt

#### 9.1.1 Plug position PowerAdapt

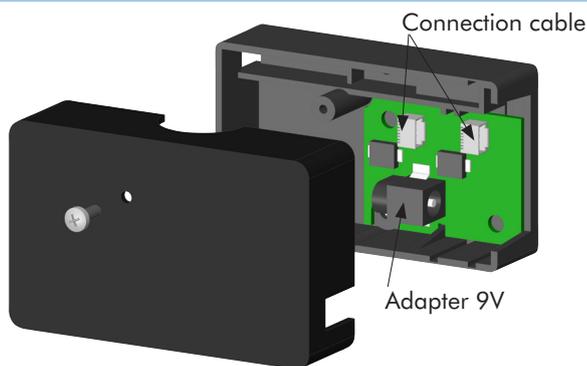


#### 9.1.2 Drill pattern Gator PowerAdapt

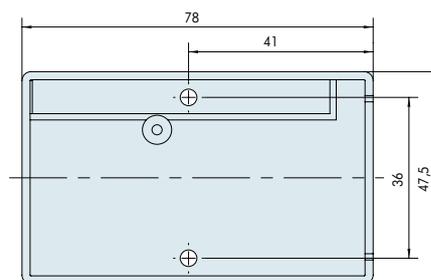

- Gator PowerAdapt can be fixed with the factory-mounted double-sided adhesive tape.


### 9.2 GatorSignal plus

- Further Installation instructions and circuit diagram see separate installation instruction GatorSignal plus.

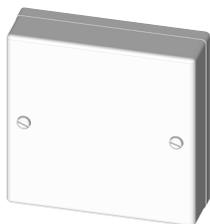


## 10 Wiring

### 10.1 Gator 2000 - Example circuit diagram

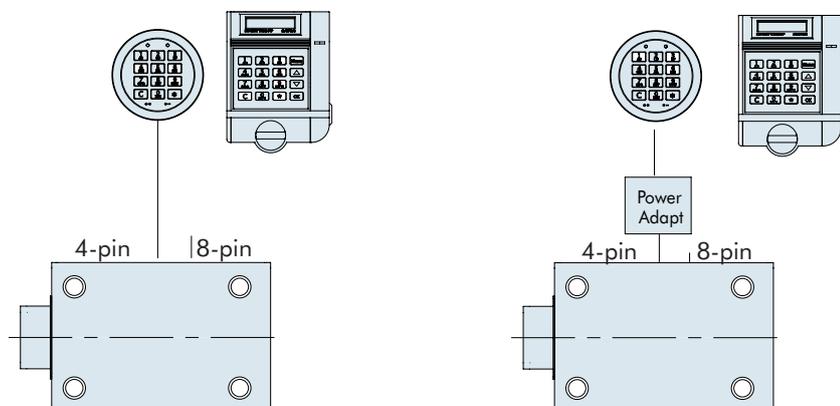

10.2 Gator 3000/3010/5000 - Example circuit diagram

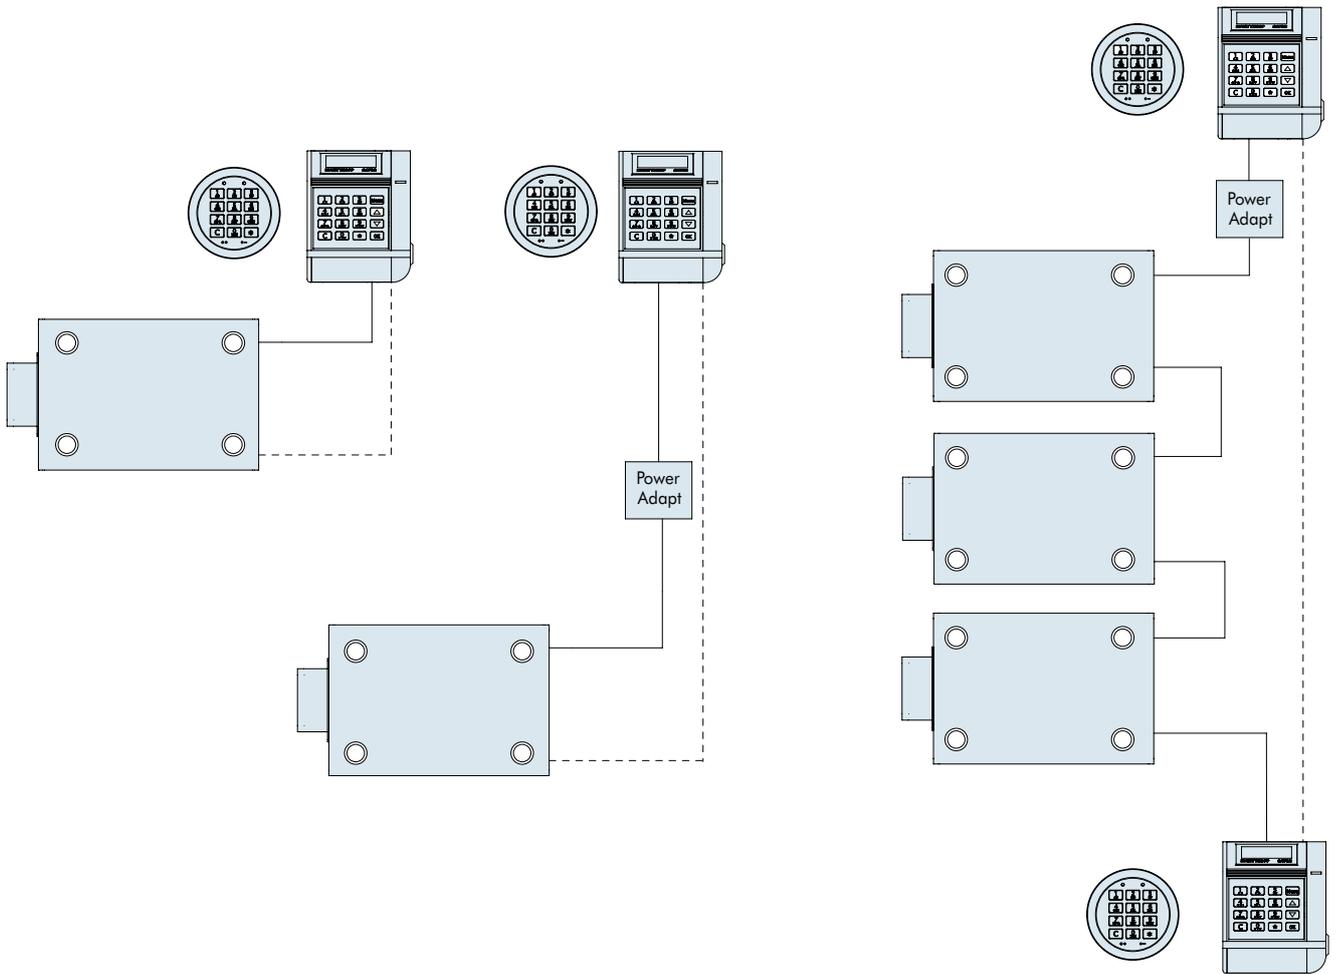


----- optional bus cables for redundancy

Attention:

- When there are more than 3 locks per system, we recommend to use further more external power supplies. This would need to be verified individually.
- Redundancy systems are only available with the input units Gator F/DF/R/DR.

**10.3 Gator 6000/8000/9000 - Beispiel Anschaltschema**

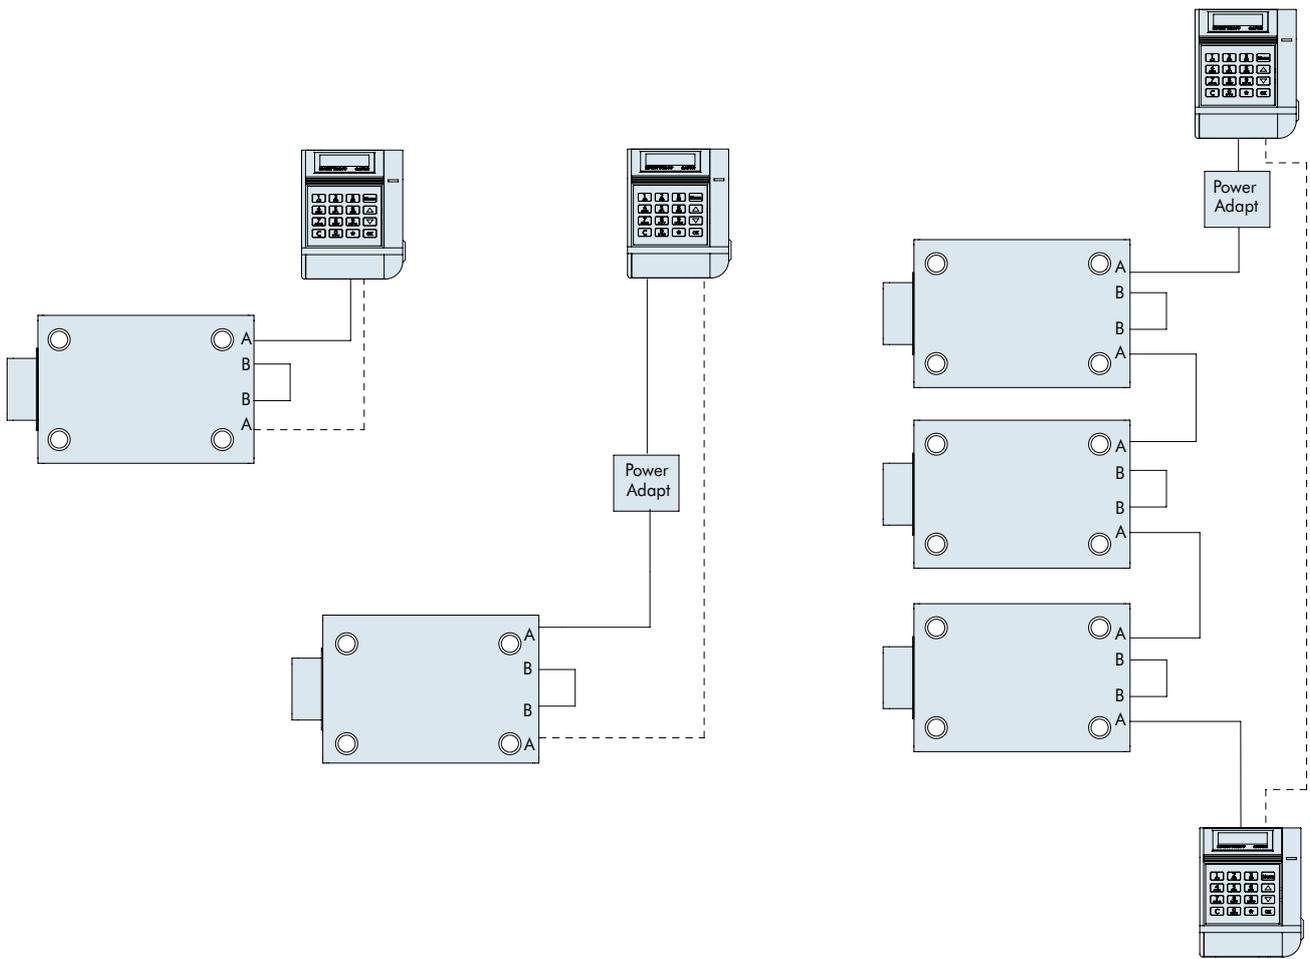

----- optional bus cables for redundancy

**Attention:**

- When there are more than 3 locks per system, we recommend to use further more external power supplies. This would need to be verified individually.
- Redundancy systems are only available with the input units Gator F/DF/R/DR.
- Plug in a connection cable for the redundancy between the left and the right electronic (Plug position B - B).

## 11 Functional test (when the door is open)

### Attention: for Gator 5000/6000/8000/9000 danger of collisions! - see below

- Connect the power supply: connect the battery 9V block with the battery clip in the input unit or switch on the external power supply.
- Enter the factory code:  
Locks Gator 2000/3000/3010/5000/6000: 0 – 0 – 1 – 2 – 3 – 4 – 5 – 6  
Locks Gator 8000/9000: 0 – 0 – 1 – 2 – 3 – 4 – 5 – 6 – 0 – 0  
Re-enter the factory code when the power was switched off.
- **Gator 2000:**  
Turn the input unit or the knob within 20 seconds into opening position. The lock is opened.  
Turn the handle into opening position.  
Closing shall be performed in reverse order.
- **Gator 3000/3010:**  
The lock's bolt opens automatically (has to happen easily). The lock is opened.  
Turn the handle within 20 seconds into opening position.  
Turn the handle into locking position. The lock's bolt closes automatically and blocks. The lock is closed.
- **Gator 5000/6000/8000/9000:**  
Attention - Danger of collisions! The locks are factory setted to close automatically after 20 seconds.  
To avoid a collision a boltwork position switch has to be connected with GatorSignal plus.  
Further Installation instructions and circuit diagram see separate installation instruction GatorSignal plus.  
The lock's bolt opens automatically (has to happen easily). The lock is opened.  
Turn the handle within 20 seconds into opening position.  
Turn the handle into closing position. The lock's bolt closes automatically and blocks. The lock is closed.

